



Inspection Report (FRI)

IO#MT-20260510-001

GENERAL INFORMATION

Client: Zoe Furnconsult Ltd	
Product:	Folding chair(black/grey)
Inspection location:	Yatou Industry Zone, No. 392 Aomen, Zhangzhou, China.
Inspection date:	May 10 th 2026
Your reference number:	MMV-100691 (JC-260 black) MMV-101863 (JC-260 grey)
PO number:	3300932
Supplier:	WANHAO INDUSTRY CO.,LIMITED
Order quantity:	3943pcs
Qty ready for inspection (%):	3960Pcs (100.43%)
Reference sample available:	No



INSPECTION RESULT

OVERALL RESULT	Pending				
CRITERIA	RESULTS	REMARKS			
1. Quantity	Pending	3			
2. Production Status/specification	Pass				
3. Packing and marking	Pending	4,5			
4. On-site tests & special requirement	Pending	1,2			
5. WORKMANSHIP AQL:	Within AQL		CRI	MAJ	MIN
		Found	0	4	10
		Max	0	10	14
		Checked	200	200	200

REMARKS


- 1.The factory does not have customer approved samples or color sample for reference.
- 2.Factory did not allow to do carton drop test.
- 3.For item:MMV-100691(JC-260 black),order quantity 3043pcs, and actual factory shipment quantity is 3060pcs(510cartons).




		CY Closing Date: _____
Customer item #	Description	Q'ty
MMV-100691 (JC-260 black)	Folding chair, s/6, black/black	3043
MMV-101863 (JC-260 grey)	Folding chair, s/6, black/grey	900



4. The customer did not provide the specification of carton shipping mark for inspection reference. Only provided reference templates, the actual carton shipping marks do not show the customer's logo, but the reference template provided by the customer indicates that a logo is required. For details, please refer to the report photos.

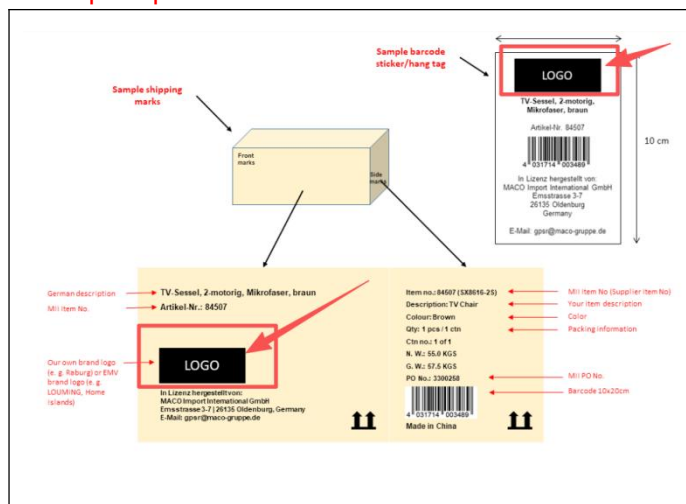

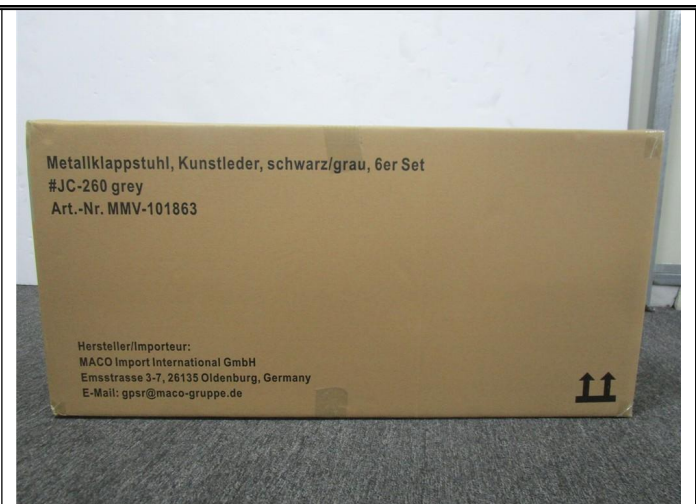

N/A

5.The actual barocde labels do not show the customer's logo, but the reference template provided by the customer indicates that a logo is required. and actual barcode label were not different from client's spec.

Sample barcode sticker/hang tag

Front marks

Our own brand logo (e.g. Raburg or EMV brand logo (e.g. LOUJING, Home islands))

Bar code labels Order-No. 3300932

Metallklappstuhl, Kunstleder, schwarz/schwarz, 6er Set (Raburg)


Art.-Nr. MMV-100691
JC-260 black

MACO Import International GmbH
Emsstrasse 3-7, 26135 Oldenburg, Germany
E-Mail: gpsr@maco-gruppe.de

Metallklappstuhl, Kunstleder, schwarz/grau, 6er Set (Raburg)

Art.-Nr. MMV-101863
JC-260 grey

MACO Import International GmbH
Emsstrasse 3-7, 26135 Oldenburg, Germany
E-Mail: gpsr@maco-gruppe.de

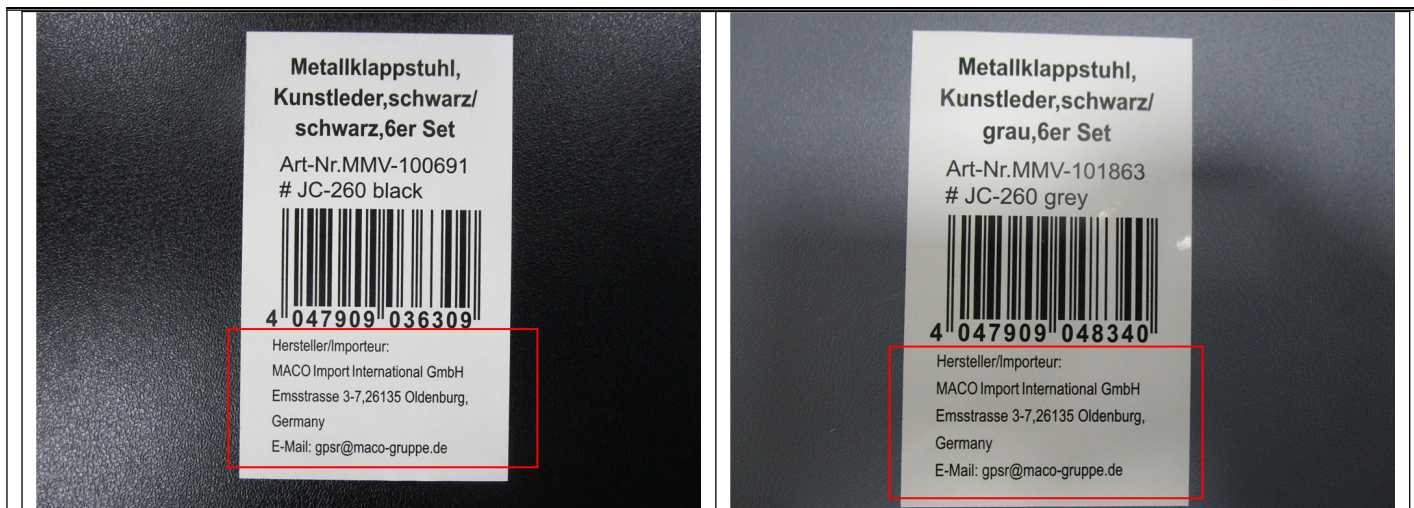

INSPECTION STANDARDS

Inspection type	Final Random Inspection (FRI)
Sampling standard	ANSI/ASQ Z1.4-2003 (Equivalent to ISO 2859-1 or MIL-STD-105E)
Sampling Plan (Single)	II
AQL for Critical/ Major/ Minor	Not Allowed/2.5/4.0
Sampling size for Cri/Maj/Min	200/200/200
No. of cartons selected and inspected	34ctns
Number list of selected cartons/packages	MMV-100691(JC-260 black):243,247,135,144,155,100,68,116,419,1,28,317,3,162,289,189,72,295,165,290,40,112,170,73,164,442 MMV-101863(JC-260 grey):36,13,39,11,150,1,40,89

1. Quantity	Result	Actual Finding / Comments
80%of the total order quantity must be packed. and 100% finished - order qty: 3943Pcs	Pending	Remark 3

Item/PO #	Order qty	Finished qty	Unfinished qty	Packed qty	Unpacked qty	Sample size
MMV-10069 1(JC-260 black)	3043	3060	0	3060	0	155
MMV-10186 3(JC-260 grey)	900	900	0	900	0	45
Total:	3943	3960	0	3960	0	200



Pictures:



2.Product Status:	Result	Problem Comments
	OK	
2A. Product colour/design/specification		Actual Finding
Client's expected:		See below photos

Item No. MMV-100691(J C-260 black)	Spec./ref. sample	Sample 1	Sample 2	Sample 3
Size (cm)	N/A	Open size: 44.2x44.5x78cm, Folded size: 44.5x4x93cm Tube Aid:19mm	Open size: 44.2x44.5x78cm, Folded size: 44.5x4x93cm Tube Aid:19mm	Open size: 44.2x44.5x78cm, Folded size: 44.5x4x93cm Tube Aid:19mm
Net weight (Kg)	N/A	3.20	3.34	3.25



zofurnconsult.com

Item No. MMV-101863(J C-260 grey)	Spec./ref. sample	Sample 1	Sample 2	Sample 3
Size (cm)	N/A	Open size: 44.2x44.5x78cm, Folded size: 44.5x4x93cm Tube Aid:19mm	Open size: 44.2x44.5x78cm, Folded size: 44.5x4x93cm Tube Aid:19mm	Open size: 44.2x44.5x78cm, Folded size: 44.5x4x93cm Tube Aid:19mm
Net weight (Kg)	N/A	3.32	3.30	3.28

Pictures:


MMV-100691(JC-260 black)











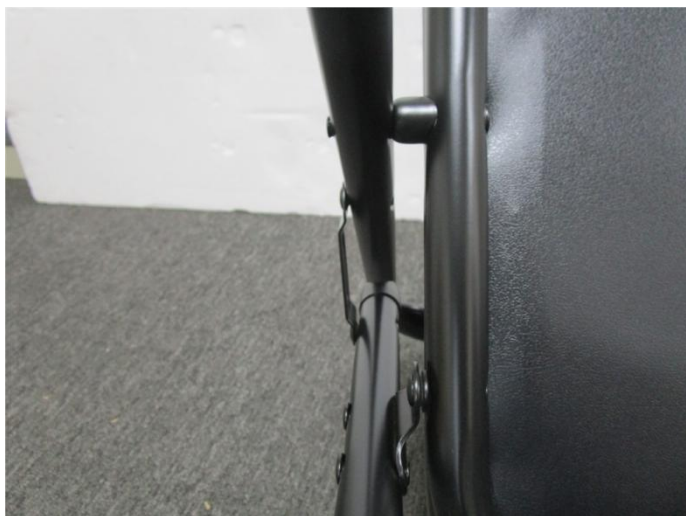

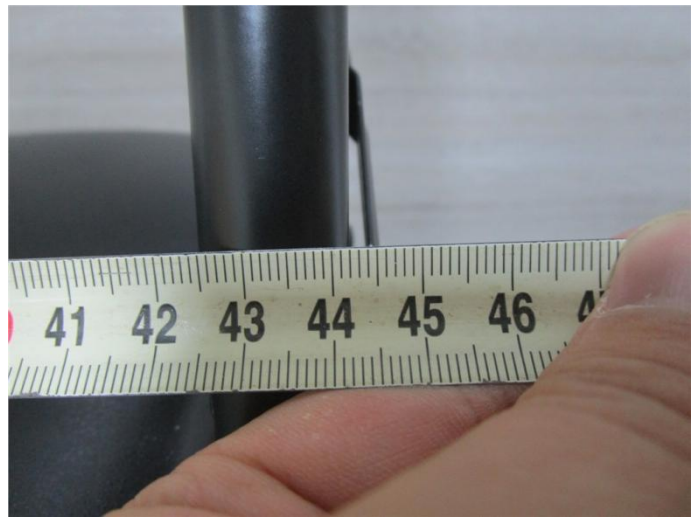

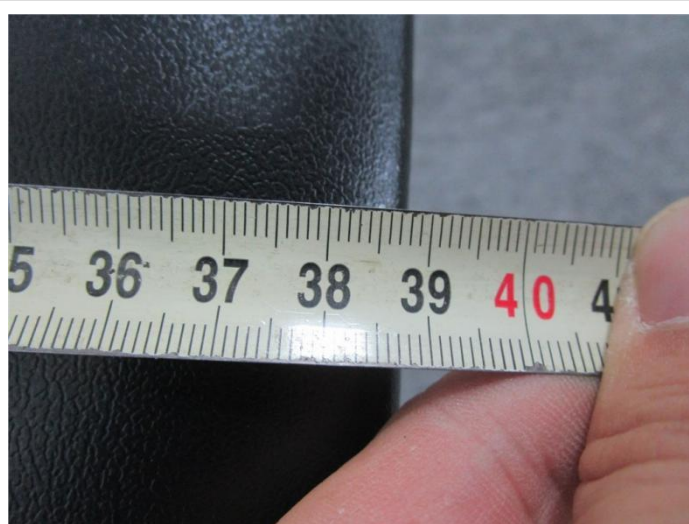



MMV-101863(JC-260 grey)












**Metallklappstuhl,
Kunstleder,schwarz/
grau,6er Set**


Art-Nr.MMV-101863
JC-260 grey






4 047909 048340

Hersteller/Importeur:
MACO Import International GmbH
Emsstrasse 3-7,26135 Oldenburg,
Germany
E-Mail: gpsr@maco-gruppe.de

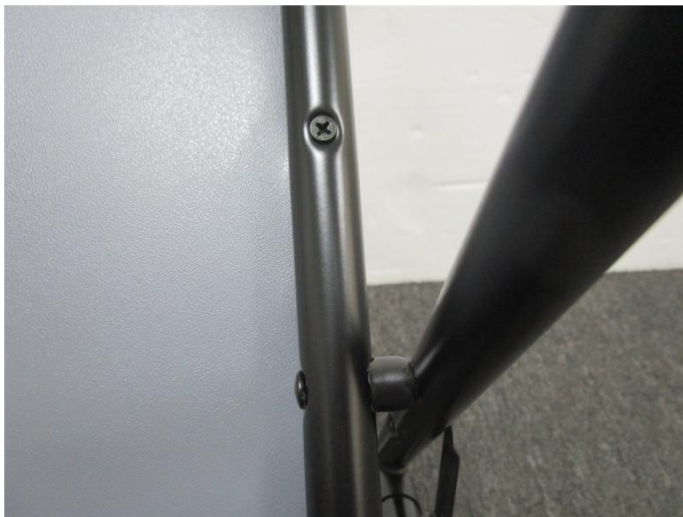

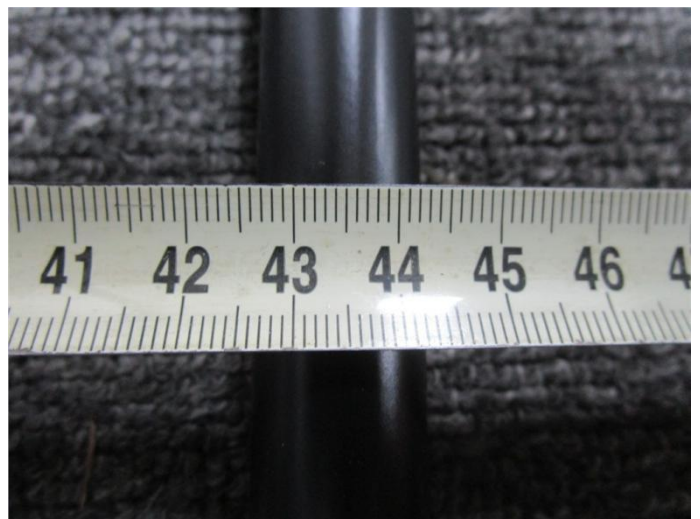

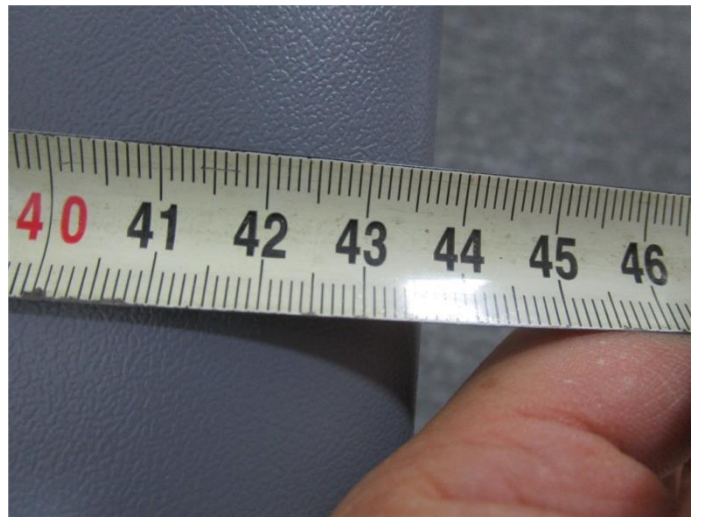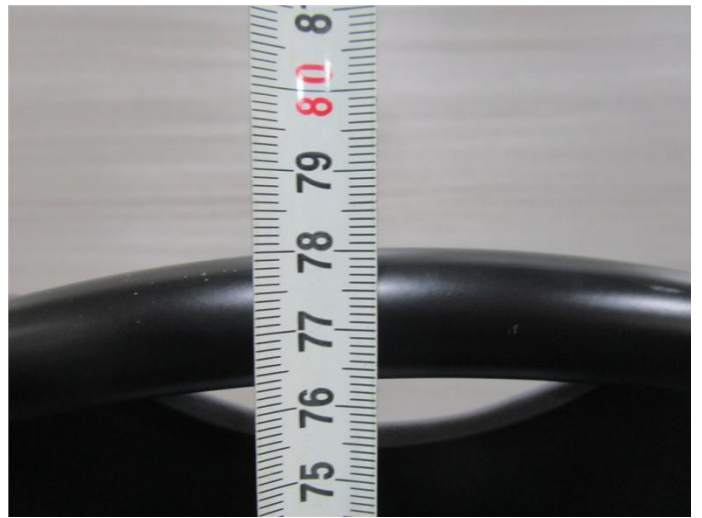

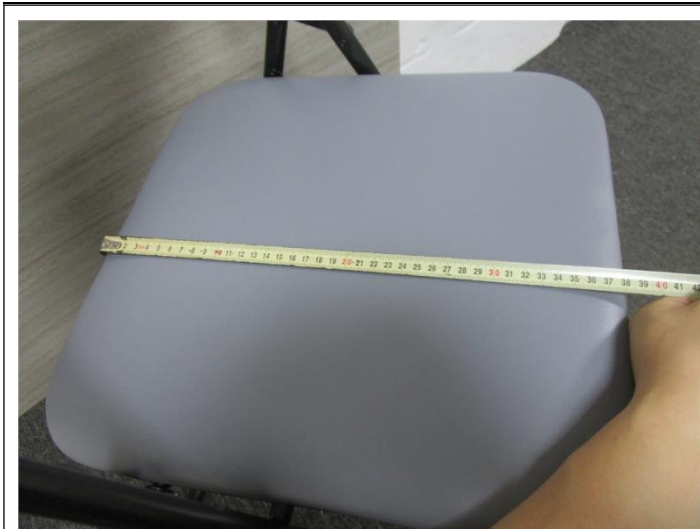





3. Packing and Marking	Result	Problem Comments
		PENDING
3A. Shipping Marks/carton weight		Actual Finding
A1. Carton Mark		See below photos
A2. Weight of carton:		MMV-100691(JC-260 black):20.90kg MMV-101863(JC-260 grey):21.20kg
3B. Packing and dimension		Actual Finding
Client's comments:		
B1. Outer packing method and dimension L: cm x W: cm x H: cm		MMV-100691(JC-260 black): 6pcs per carton /92x25.7x45.1cm MMV-101863(JC-260 grey): 6pcs per carton /92x25.7x45.2cm

Pictures:

Item:MMV-100691(JC-260 black)

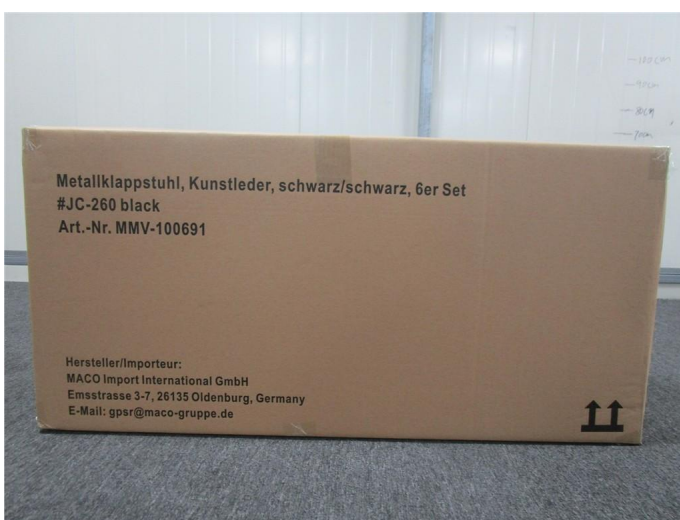



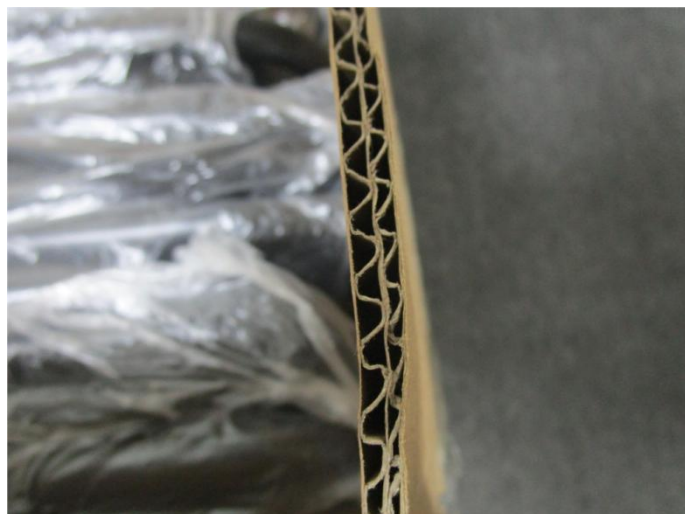






WARNING: To avoid danger of suffocation, keep this bag away from babies and children. Do not use in cribs, beds, carriages or Playpens. This bag is not a toy. Discard bag and any other packing materials immediately after removing product. Do not re-use this bag.

ACHTUNG! ERSTICKUNGSGEFAHR PLASTIKTÜTEN UND VERPACKUNGSMATERIALIEN VON KINDERN FERNHALTEN.

ADVERTENCLA: Para evitar riesgo de sofocación, mantenga esta bolsa alejada de bebés y niños. No use en cunas, camas, carriolas o corralitos. Esta bolsa no es un juguete. Tire la bolsa y los otros materiales de empaque inmediatamente. No re-use ésta bolsa.



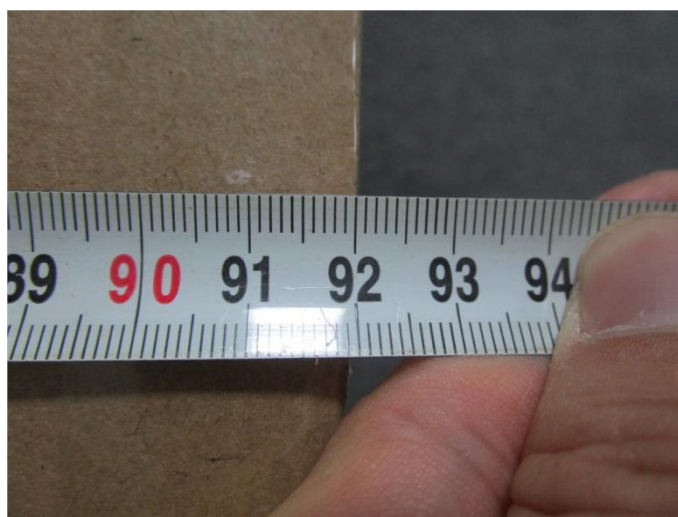


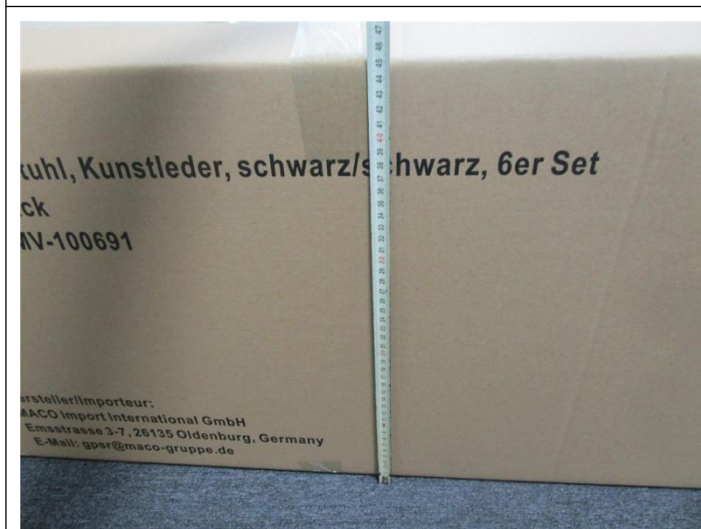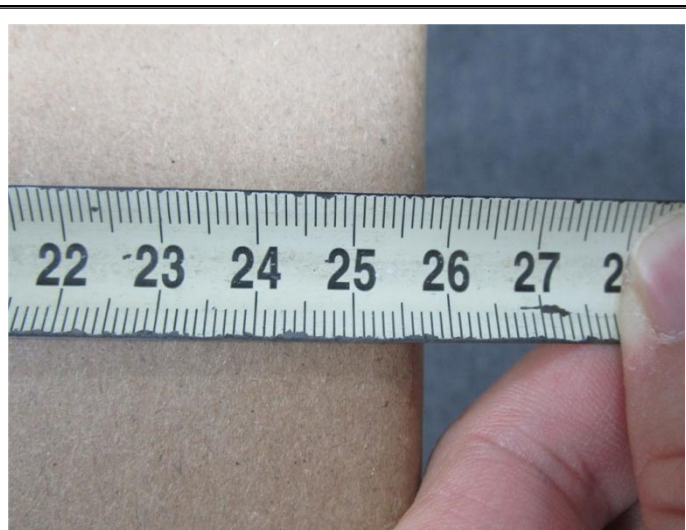




Item: MMV-101863(JC-260 grey)



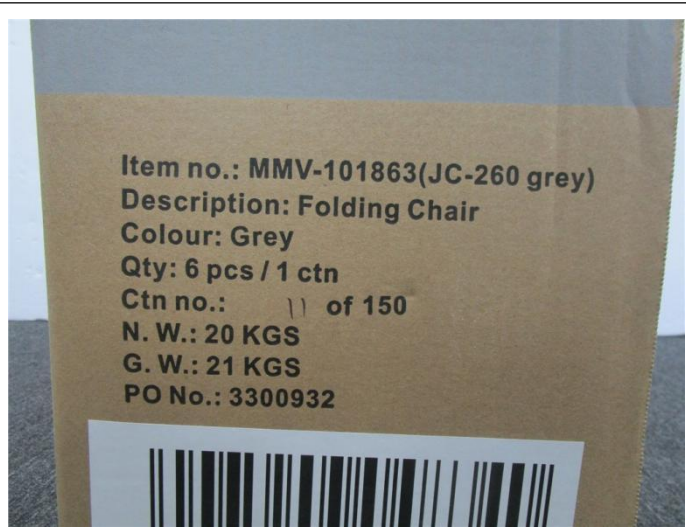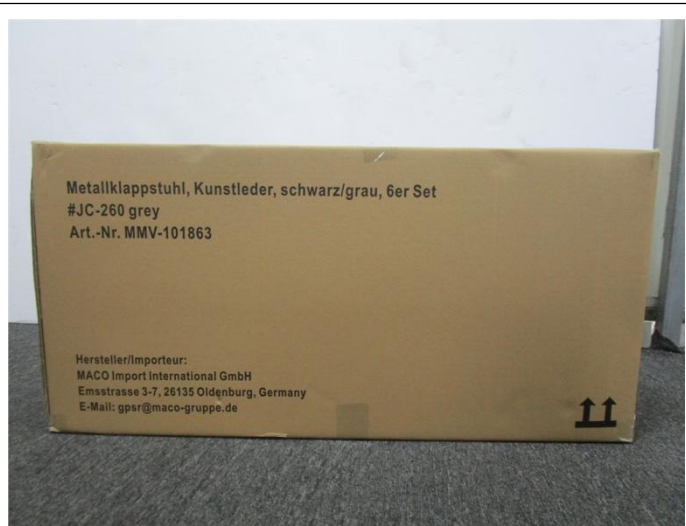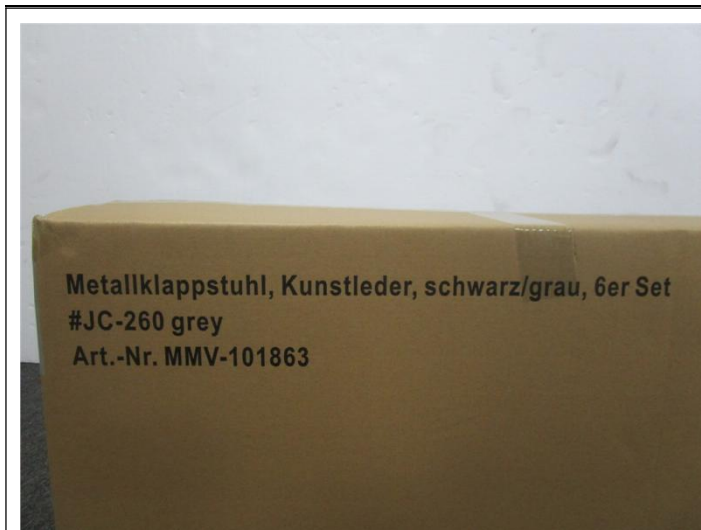



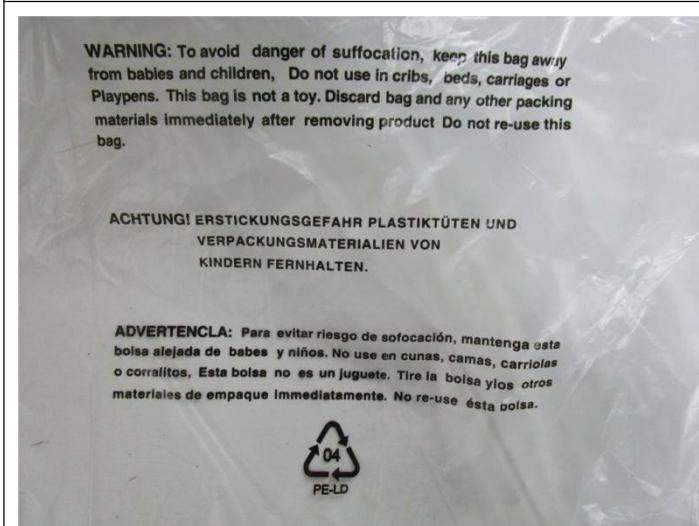



TESTS AND SPECIAL REQUIREMENTS

Requirements	Comments from Inspector	Result
Perform a carton drop test: 10 drops from the correct height based on carton weight as defined in ISTA 1 A(6 faces, 3 edges,1 corner) - On 1 cartons – packed products should not get damaged	Factory did not allow perform carton drop test on site.	Pending
Perform a barcode-scanning test-The barcode should be scannable and have the correct number; make sure that that the correct barcode is on the correct product. (no mixed barcode for each reference)-S2	Check OK	PASSED



--





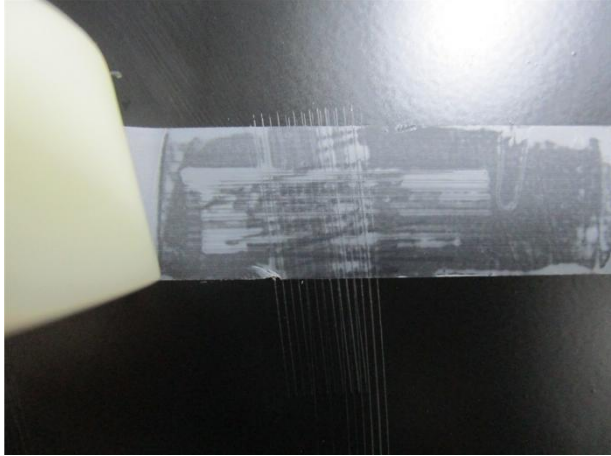
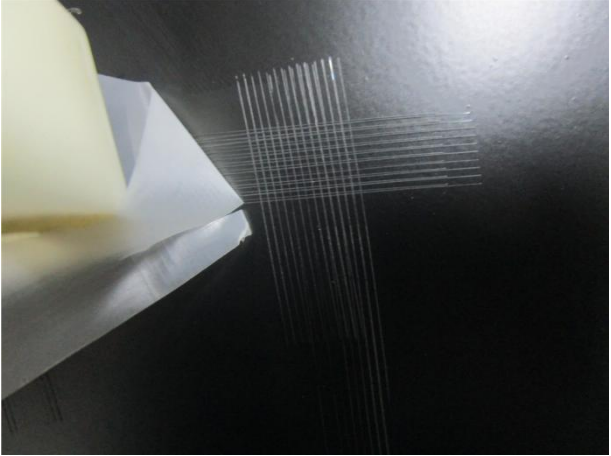

Perform a rub test and an adhesive test-Perform the rub and adhesive test on all of printing, marking and logo found on the product: Use alcohol if petroleum spirits is not available for rub test; Use 3M tape for the adhesive test on the silk-screening and painting. -S2

Check OK





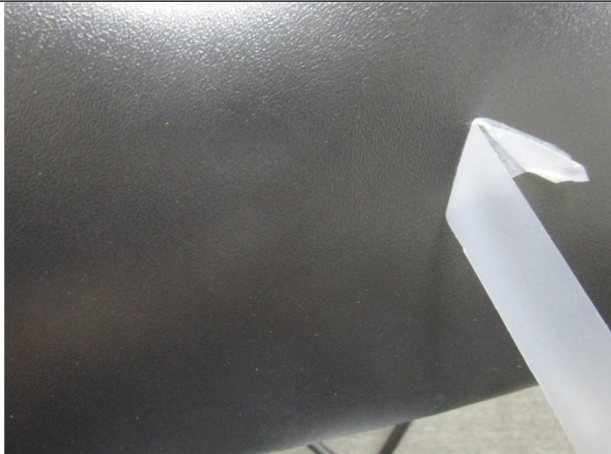

PASSED





		
		
<p>Check the smell of product, is there any odor smell or bad smell?</p>	<p>Normal smell</p>	<p>PASSED</p>
	<p>N/A</p>	
<p>please check the surface details and stability</p>	<p>Check OK</p>	<p>PASSED</p>



		
		
<p>check and compare the color with color swatch</p>	<p>No sample or color swatch</p>	<p>PENDING</p>
<p>Assemble the item. Perform a function test and wobble check.-The item should be easy to assemble.-S1(5 Pcs)</p>	<p>Check OK</p>	<p>PASSED</p>
		
<p>*Perform a static loading test.* -Place 110kg on every seat of the item at the same time for 1 hour. Place the weights at least 10cm away from the edges of the seats - There should be no deformity.-3 pcs</p>	<p>Check OK</p>	<p>PASSED</p>



		
		
		
<p>Check that the back is well fixed to the chair and strong enough to support one person, by sitting and pushing it.--S2 (5 Pcs)</p>	<p>Check OK</p>	<p>PASSED</p>




		
		
Perform a fatigue test-On all adjustable parts. Do this 20 times.-S2	Check OK	PASSED
		



<p>During the 15-degree slope test, the product must not tip over-S2</p>	<p>Check OK</p>	<p>PASSED</p>




		
<p>Humidity test the moisture content should be 8% to 12%-S2</p>	<p>Check OK</p>	<p>PASSED</p>
		
<p>Inspection of the fillers inside the product-1pc/item</p>	<p>Check OK</p>	<p>PASSED</p>
		

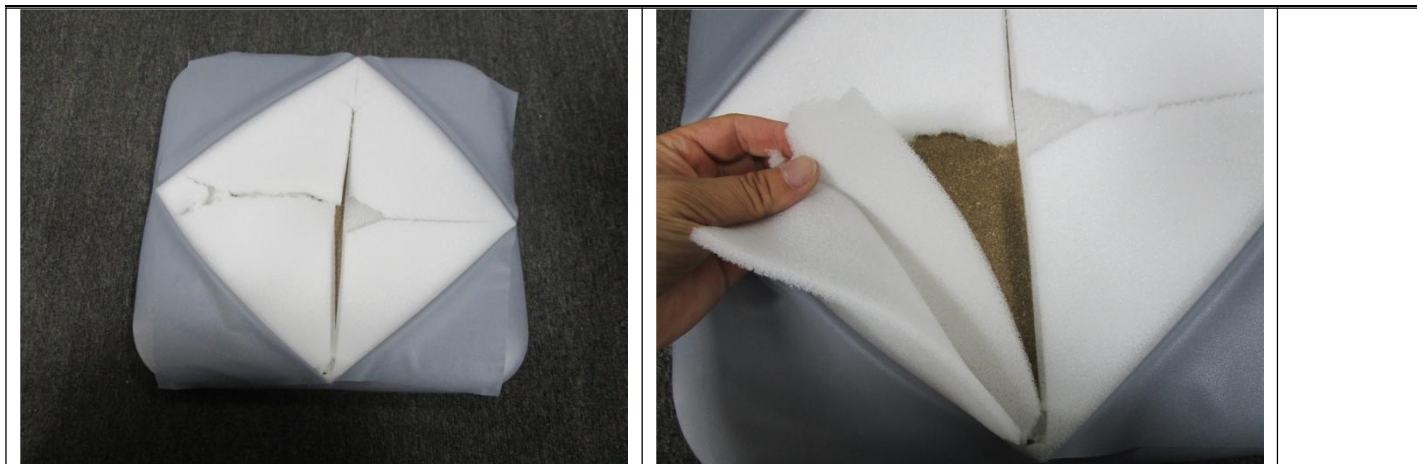

DEFECTIVES LIST

	CRI	MAJ	MIN	Picture
Defects for style #MMV-100691(JC-260 black)				
sub sample size :155 pcs				
Leather wrinkling	0	1	0	-
Broken mark	0	1	0	-

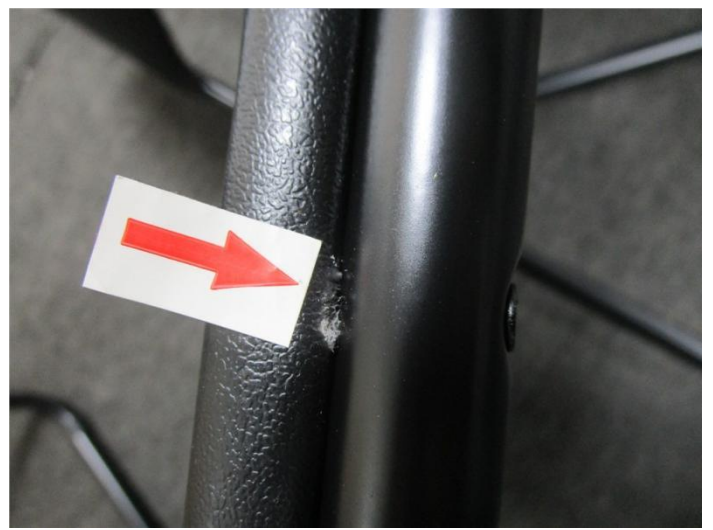

Scratch mark


0


1

5

-



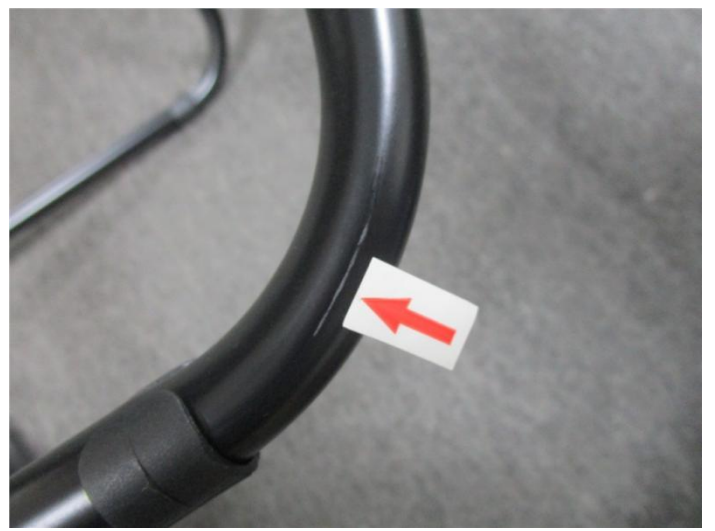

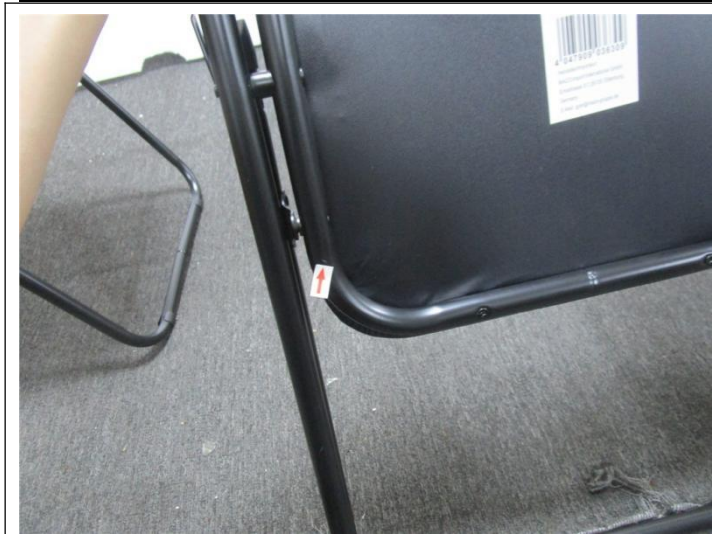


Dirty mark

0

0

1

-

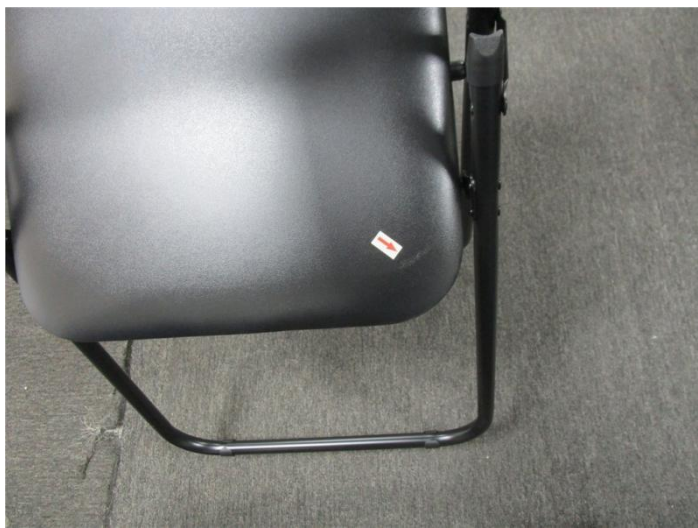

Particle residue

0

0

1


-



**Defects for style #MMV-101863(JC-260 grey)
sub sample size :45 pcs**



Scratch mark	0	1	1	-
				
				
Dirty mark	0	0	2	-
				

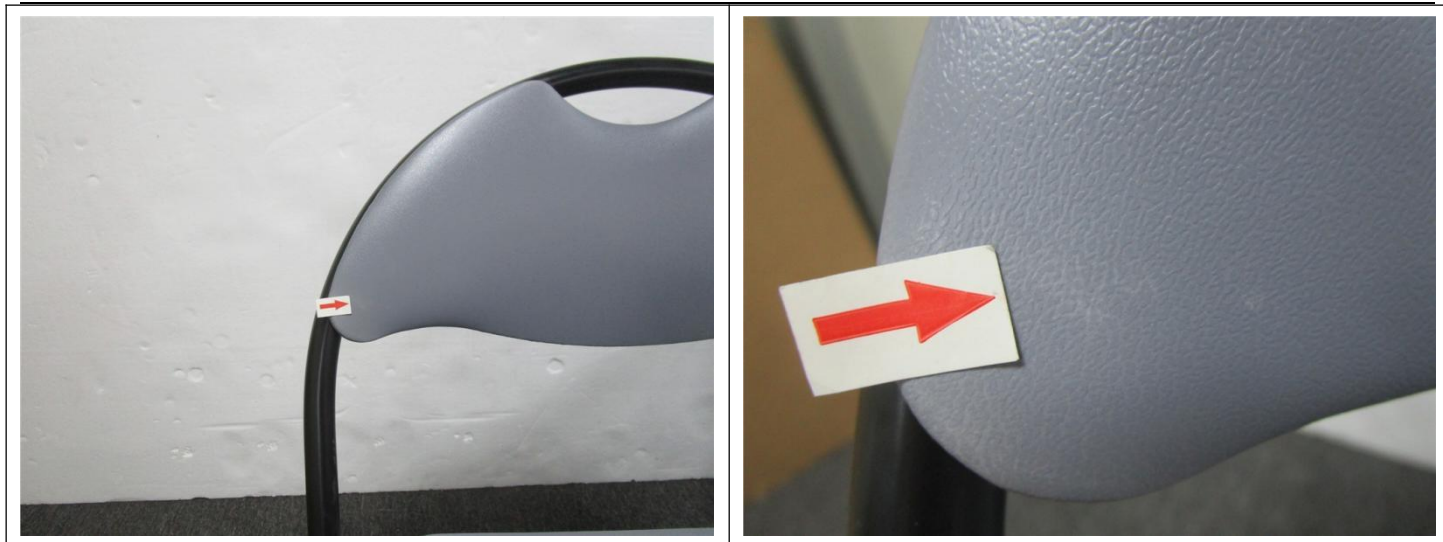

Sample size	Maximum Allowed	Total Defectives	Result	Notes
CRI : 200	0	0	Within AQL	
MAJ : 200	10	4	Within AQL	
MIN : 200	14	10	Within AQL	

End of the Report